

Sentry 600 Quick Launch Guide

1. Sentry 600 must have been charged* > 15 hours before use
2. Check on the display power is on, and the monitor is switched on before proceeding.
3. Login to CCIS
4. Go to Cloud Launch
5. In Cloud Launch
 - a. Select profile
 - b. Add trip data
 - c. Scan logger id or enter manually

Power On Screen Display

DEVICE STATUS

Power: On Last: 199 Min
 Batt: 100% Type: LTE
 Signal:

Login screen CCIS

Login

 tss
 TSS - The Test Scripting System

Username:

Please enter a username

Password:

☐ Remember Me


[LOGIN](#)

[Forgot username or password?](#)

Cloud Launch Application



Temperature sensor

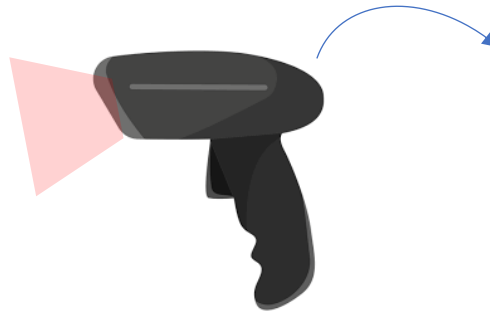


Scanned logger ID in Cloud Launch

ENTER LOGGER ID(S) LOGGER COUNT: 1


866833041405694 x

6. Check that all information is correct, then click “Launch”
7. Place the Sentry 600 with its temperature sensor (located at its bottom side) exposed to the environment, e.g., oriented towards a box opening.

Launch button in Cloud Launch

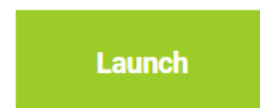

*Sentry 600 Charging Operation

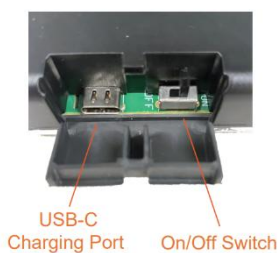

Red LED Indicates Charging



Green LED Indicates Fully Charged

